# 13 W LED Downlight – Tricolour, Flat Cover

**240 V mains power – this light must be installed by a licensed electrician to AS/NZS 3000. Turn the power off at the switchboard first.**

## IN THE BOX


- 1 × 13 W downlight with built-in driver and flat white cover
- Lead with plug, attached to the light

## YOU WILL NEED

- Drill with 120–130 mm hole saw or circle cutter
- Pencil
- Safety glasses and dust mask
- Torch

## BEFORE YOU START

- Measure the old hole: this light suits holes 120–130 mm wide.
- Check there is at least 63 mm of space above the ceiling.
- Check your dimmer is suitable for LED lights.

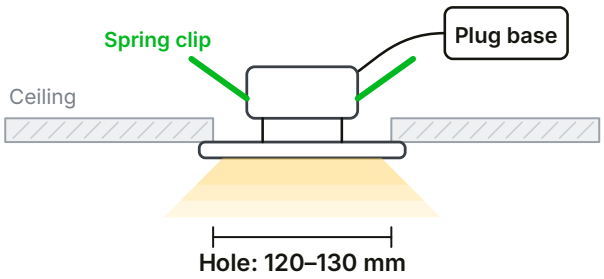


## STEP BY STEP

1. Turn the power off at the switchboard.
2. Remove the old light, or cut a new round hole 120–130 mm wide.
3. Set the colour switch on the back of the light to 3000 K, 4000 K or 5000 K.
4. Wire a 240 V plug base in the ceiling next to the hole, on the light switch circuit.
5. Plug the light's lead into the plug base.
6. Hold both spring clips up, push the light into the hole and let the clips hold it.
7. Turn the power on and test the light and dimmer.

## SETTINGS & USE

- Colour switch on the back: 3000 K warm, 4000 K natural, 5000 K bright.
- Set the colour before fitting.

## DO NOT

- Don't work on the light with the power on.
- Don't spray water at it – only the front is IP54.
- Don't use a dimmer that isn't made for LED lights.

## CARE & TROUBLESHOOTING

- Turn the power off and wipe with a soft, dry cloth.
- If it flickers when dimmed, raise the dimmer's lowest setting or try an LED-rated dimmer; if it keeps happening, call Greenhse on (08) 9297 2969.

**Installation:** Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 4 years. Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.