INSTALLATION GUIDE

Product code: amari-dc-52-fan-light-bw

Amari 52" DC Ceiling Fan with Tricolour Light

Must be installed by a licensed electrician (AS/NZS 3000) – the fan must be earthed and needs a wall isolation switch.

IN THE BOX


- 1 × fan motor with 4 ABS blades and blade screws
- 1 × 24 W LED light kit with diffuser
- 1 × hanging bracket, canopy and covers
- 1 × short and 1 × long down rod
- 1 × remote control with wall holder
- 1 × receiver (goes inside the canopy)
- 1 × blade balancing kit

YOU WILL NEED

- Drill, screwdriver and spanner
- Ladder
- Wire strippers (electrician)
- 2 × AAA remote batteries (if not in the box)

BEFORE YOU START

- Blades at least 2.1 m above the floor and 150 mm from walls and ceiling.
- Find a joist or support that holds at least 45 kg. The screws supplied suit timber – buy screws to suit any other support.
- Raked ceilings: 10° max. (a longer rod may be needed).

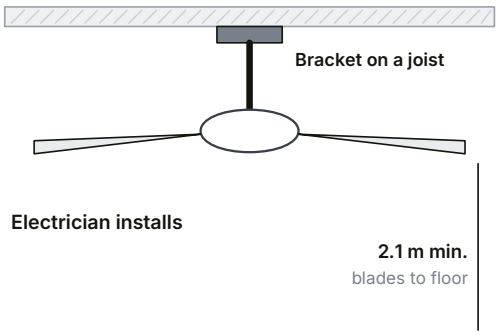

STEP BY STEP

1. Turn the power off at the switchboard.
2. Screw the hanging bracket to the support with at least 30 mm of screw in the timber. On a raked ceiling, the open side faces the higher side.
3. Fit the blades ('THIS SIDE UP' facing up); tighten firmly but don't over-tighten. Fit the bottom cover.
4. Plug in the light kit, screw it on, then twist the diffuser until it locks.
5. Pick the short or long down rod. Feed the wires through the rod, fit the cross pin and cotter pin, and tighten the screws. Slide on the yoke cover and canopy.
6. Lift the fan and seat the ball in the bracket. The electrician connects active, neutral and earth, joins the plug connector and tucks the receiver inside the canopy.
7. Screw the canopy up and slide the screw cover over the screws.
8. Fit the remote batteries and screw its holder level on the wall. Power on, test the speeds, reverse and light, then balance the blades with the kit.

SETTINGS & USE

- Remote is already paired. To re-pair: power off 10 s, power on, then within 3 s hold FAN OFF until a long beep.
- Light colour: with the light off, set the switch on the LED light – WW 3000 K, CW 4200 K, NW 6000 K. Dim with LED+ / LED– on the remote.
- Reverse: drop to speed 1 or 2 first. Windbreeze varies the speed like a natural breeze.

DO NOT

- Don't use a dimmer or any controller other than the Amari remote or the optional Amari wall controller.
- Don't install where rain or wind can reach it – in alfresco areas keep it at least 1.5 m in from the roof edge.
- Don't clean it with water.

CARE & TROUBLESHOOTING

- Power off and dust the blades with a dry cloth. Check bracket and blade screws twice a year.
- Some noise in the first 8 hours is normal settling. A loud hum later can be ripple signals – call your power company.
- Receiver beeps 10 times? Change the remote batteries; if it keeps beeping, have the wiring checked.

Installation: Greenhse recommends that every product is installed by a licensed electrician to AS/NZS 3000 and local rules. Any work on 240 V wiring must be done by a licensed electrician. Incorrect installation can be unsafe and may void the warranty. **Warranty:** 3 years in-home + 3 years replacement (remote, wall controller and light: limited warranty). Keep your invoice and the electrician's certificate of compliance. Questions? Call (08) 9297 2969 or visit greenhse.com.